



Inspired by temperature

Betriebsanleitung · Operation manual · Manual de instrucciones · Manuel d'utilisation · Manuale de d'uso · 사용 설명서 · Manual de instruções · Инструкция по эксплуатации · Kullanım talimatı · 操作说明书 · Betriebsanweisung · Manual de instrucciones · Manuel d'utilisation · Manuale de d'uso · 사용 설명서 · Manual de instruções · Инструкция по эксплуатации · Kullanım talimatı · 操作说明书 · Betriebsanweisung · Manual de instrucciones · Manuel d'utilisation · Manuale de d'uso · 사용 설명서 · Manual de instruções · Инструкция по эксплуатации · Kullanım talimatı · 操作说明书

MPC Immersion Cooler

This documentation does not contain a device-specific technical appendix.

You can request the full operating instructions from info@huber-online.com. Please give the model designation and serial number of your temperature control unit in your e-mail.

huber



OPERATION MANUAL

MPC
Immersion Cooler

Immersion Cooler

MPC®

This operation manual is a translation of the original operation manual.

VALID FOR:

TC®45

TC®50

TC®100

Abbreviations used in model names:

Without = without controller, air cooled, E = with controller and Pt100 sensor,

-F = flexible evaporator, -Flasers = longer evaporator, w = water cooled

MPC controller

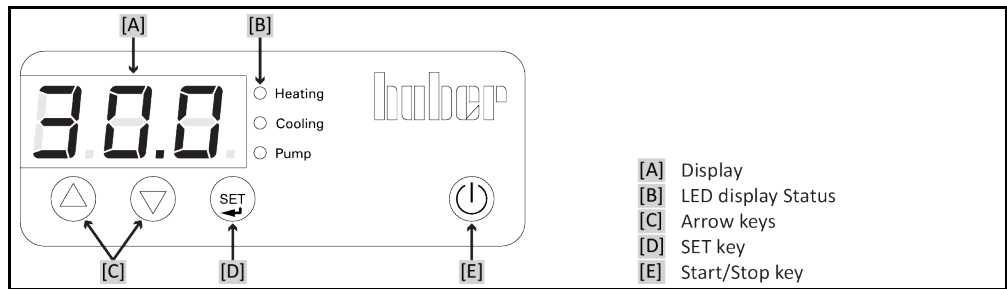


Table of contents

V2.4.0en/12.10.23//1.30

1	Introduction	12
1.1	Identification / symbols in the operation manual	12
1.2	Information on the EU Declaration of Conformity	12
1.3	Safety	12
1.3.1	Symbols used for Safety Instructions	12
1.3.2	Representation of symbols on the temperature control unit	13
1.3.3	Proper operation	13
1.3.4	Reasonably foreseeable misuse	14
1.4	Responsible bodies and operators – Obligations and requirements	14
1.4.1	Obligations of the responsible body	14
1.4.1.1	Proper disposal of resources and consumables	15
1.4.1.2	Temperature control units with refrigerants	15
1.4.2	Requirements for operators	18
1.4.3	Obligations of the operators	18
1.5	General information	18
1.5.1	Description of workstation	18
1.5.2	Safety devices to DIN 12876	18
1.5.3	Further protective devices	19
1.5.3.1	Power interruption	19
1.6	Exemplary illustrations of the cooling variants	20
2	Commissioning	21
2.1	In-plant transport	21
2.1.1	Lifting and transporting the temperature control unit	21
2.1.1.1	Temperature control unit without lifting eyes	21
2.1.2	Positioning the temperature control unit	21
2.1.2.1	Temperature control unit with casters	21
2.1.2.2	Temperature control unit without casters	22
2.2	Unpacking	22
2.3	Ambient conditions	22
2.3.1	EMC-specific notes	23
2.4	Installation conditions	24
2.5	Recommended cooling water hoses	24
2.6	Wrench sizes and torques	24
2.7	Temperature control units with water cooling	25
2.8	Preparations for operation	27
2.8.1	Unscrewing/activating the leveling feet (if any)	27
2.8.2	Use of the Probe [67]	27
2.8.2.1	Immersion depth of the probe [67]	28
2.8.3	Connecting the functional ground	28
2.9	Connecting to the power supply	28
2.9.1	Connection using socket with protective earth (PE)	28
2.9.2	Connection via hard wiring	29
3	Function description	30
3.1	Function description of the temperature control unit	30
3.1.1	General functions	30

3.1.2	Other functions	30
3.2	Information on the thermal fluids	30
3.3	To be noted when planning the test	31
3.4	Only valid for temperature control units with MPC controller:.....	31
3.4.1	Display and control instruments.....	31
3.4.1.1	Display	31
3.4.1.2	LED display status.....	31
3.4.1.3	Arrow keys.....	31
3.4.1.4	SET key.....	31
3.4.1.5	Start/Stop key.....	32
3.4.2	Menu function	32
3.4.3	Function examples	32
3.4.3.1	Display setpoint.....	32
3.4.3.2	Set/change setpoint	32
3.4.3.3	Changing the Auto-Start function.....	32
4	Setup mode	34
4.1	Setup mode	34
4.1.1	Turning on the temperature control unit - without controller.....	34
4.1.2	Turn temperature control unit off - without controller.....	34
4.1.3	Turning off the temperature control unit / with controller.....	34
4.1.4	Turning off the temperature control unit - with controller	34
5	Normal operation	35
5.1	Automatic operation	35
5.1.1	Temperature control.....	35
5.1.1.1	Starting the temperature control process - without controller	35
5.1.1.2	Ending the temperature control process - without controller	35
5.1.1.3	Starting the temperature control process - with controller.....	35
5.1.1.4	Ending the temperature control process - with controller	35
6	Interfaces	36
6.1	Pt100 process [49].....	36
7	Service/maintenance	37
7.1	Electrical fuse (if available).....	37
7.2	Display of errors - only for MPC controllers.....	37
7.3	Maintenance.....	38
7.3.1	Function check and visual inspection	38
7.3.2	Replacing coolant hoses.....	39
7.3.3	Cleaning the liquefier fins	39
7.3.4	Cleaning the hat-type strainer/dirt trap	39
7.3.4.1	Draining the cooling circuit	40
7.3.4.2	Dismantling the cooling water supply	40
7.3.4.3	Cleaning the hat-type strainer/dirt trap.....	40
7.3.4.4	Installing the cooling water supply.....	40
7.4	Cleaning the surfaces	40
7.5	Plug contacts.....	41
7.6	Decontamination/repairs	41
8	Shutting down	42
8.1	Safety instructions and basic principles	42
8.2	Switch-off	42

8.3	Remove probe [67] from thermal fluid	42
8.4	Draining the cooling water	43
8.4.1	Draining process	43
8.5	Packing	43
8.6	Shipping.....	43
8.7	Disposal	44
8.8	Contact data	45
8.8.1	Telephone number: Customer Support	45
8.8.2	Telephone number: Sales	45
8.8.3	Email address: Customer Support.....	45
8.9	Clearance certificate.....	45
9	Annex	46

Foreword

Dear customer,

Thank you for choosing a temperature control unit from Peter Huber Kältemaschinenbau SE. You have made a good choice. Thank you for your trust.

Please read the operation manual carefully before putting the unit into operation. Strictly follow all notes and safety instructions.

Follow the operation manual with regard to transport, start-up, operation, maintenance, repair, storage and disposal of the temperature control unit.

We fully warrant the temperature control unit for the specified intended operation.

The models listed on page 5 are referred to in this operation manual as temperature control units and Peter Huber Kältemaschinenbau AG as Huber company or Huber.

Liability for errors and misprints excluded.

The following trademarks and the Huber logo are registered trademarks of Peter Huber Kältemaschinenbau SE in Germany and/or other countries worldwide: BFT®, CC®, Chili®, Com.G@te®, Compatible Control®, CoolNet®, DC®, E-grade®, Grande Fleur®, Huber Piccolo®, KISS®, Minichiller®, Ministat®, MP®, MPC®, Peter Huber Minichiller®, Petite Fleur®, Pilot ONE®, RotaCool®, Rotostat®, SpyControl®, SpyLight®, Tango®, TC®, UC®, Unical®, Unichiller®, Unimotive®, Unipump®, Unistat®, Unistat Tango®, Variostat®. The following trademarks are registered in Germany to DWS Synthesetechnik: DW-Therm®, DW-Therm HT®. The following trademark is a registered trademark of BASF SE: Glystantin®.

1 Introduction

1.1 Identification / symbols in the operation manual

The following identifications and symbols are used in the texts and illustrations.

Overview	Identification / symbol	Description
	→	Reference to information / procedure.
	»TEXT«	Reference to a chapter in the operation manual. In the digital version, the text is clickable.
	>TEXT< [NUMBER]	Reference to the wiring diagram in the annex. The designation and the search digit are specified.
	>TEXT< [LETTER]	Reference to a drawing in the same paragraph. The designation and the search digit are specified.
	▪	List, first level
	–	List, second level

1.2 Information on the EU Declaration of Conformity



The equipment complies with the basic health and safety requirements of the European Directives listed below:

- Machinery Directive
- Low Voltage Directive
- EMC Directive

1.3 Safety

1.3.1 Symbols used for Safety Instructions

Safety instructions are marked by the below combinations of pictograms and signal words. The signal word describes the classification of the residual risk when disregarding the operation manual.



Denotes an immediate hazardous situation that will result in death or serious injuries.



Denotes a general hazardous situation that may result in death or serious injuries.



Denotes a hazardous situation that can result in injury.




Denotes a situation that can result in property material damage.



Denotes important notes and usable hints.

Safety information and procedure

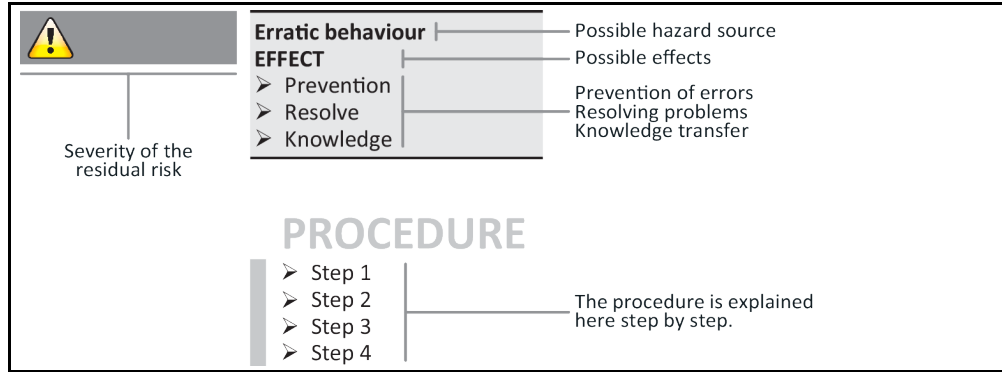

The safety information in this operation manual is designed to protect the operating company, the operator and the equipment from damage. First inform yourself about any residual risks due to misuse before you start an operation.

1.3.2 Representation of symbols on the temperature control unit

The following pictograms are used as safety identifiers. The table gives an overview of the safety identifiers used here.

Identifier	Description
Mandatory sign	
	- Observe the instructions
Warning sign	
	- General warning sign - Observe the instructions
	- Warning of electrical voltage
	- Warning of hot surface
	- Warning of flammable substances
Miscellaneous	
	Follow the national and local instructions for the disposal of electrical appliances. → Page 44, section »Disposal«

1.3.3 Proper operation



Operating the temperature control unit in a potentially explosive area

DEATH THROUGH EXPLOSION

- Do NOT install or start up the temperature control unit within an ATEX zone.

WARNING**Improper use****SERIOUS INJURY AND PROPERTY DAMAGE**

- Store the operation manual where it is easy to access in close proximity to the temperature control unit.
- Only adequately qualified operators may work with the temperature control unit.
- Operators must be trained before handling the temperature control unit.
- Check that the operators have read and understood the operation manual.
- Define precise responsibilities of the operators.
- Personal protective equipment must be provided to the operators.
- Be sure to follow the responsible body's safety rules to protect life and limb and to limit damages!

NOTE**Modifications to the temperature control unit by third-parties****DAMAGE TO THE TEMPERATURE CONTROL UNIT**

- Do not allow third parties to make technical modifications to the temperature control unit.
- The EU declaration of conformity becomes invalid if any modifications are made to the temperature control unit without the approval of Huber.
- Only specialists trained by Huber may carry out modifications, repairs or maintenance work.
- **The following must be observed without fail:**
- Only use the temperature control unit in a fault-free condition!
- Have the start-up and repairs carried out by specialists only!
- Do not ignore, bypass, dismantle or disconnect any safety devices!

The temperature control unit must not be used for any purposes other than temperature control in accordance with the operation manual.

The temperature control unit is made for industrial use. The temperature control unit is solely intended as a cooling device for cooling liquids in containers. The containers used must be resistant to temperature and thermal fluids. The temperature control unit does not have an overtemperature protection and must be additionally protected when used with heating elements. Note the temperature control unit's maximum operating temperature. The installation in public buildings is prohibited. Only use thermal fluids suitable for the overall system. The cooling capacity is provided at the >Probe< [67]. For the technical specification, refer to the datasheet. → From page 46, section »Annex«. Install, set up and operate the temperature control unit according to the instructions in this operation manual. Any failure to comply with the operation manual is considered as improper operation. The temperature control unit was manufactured according to the state of the art and the recognized safety rules and regulations. Safety devices are installed in your temperature control unit.

1.3.4 Reasonably foreseeable misuse

Use with medical devices (e.g. in Vitro diagnostic procedure) or for direct foodstuff temperature control is **NOT** permissible.

The temperature control unit must **NOT** be used for any purposes other than temperature control in accordance with the operation manual.

The manufacturer accepts **NO** liability for damage caused by **technical modifications** to the temperature control unit, **improper handling** or use of the temperature control unit if the operation manual is **not observed**.

1.4 Responsible bodies and operators – Obligations and requirements

1.4.1 Obligations of the responsible body

The operation manual is to be stored where it is easy to access in close proximity to the temperature control unit. Only adequately qualified operators (e.g. chemists, CTA, physicists etc.) are permitted to work with the temperature control unit. Operators must be trained before handling the temperature control unit. Check that the operators have read and understood the operation manual. Define precise responsibilities of the operators. Personal protective equipment must be provided to the operators.

- The responsible body must install a condensation water / thermal fluid drip tray below the temperature control unit.
- The use of a drip tray may be prescribed by national legislation for the installation area of the temperature control unit (incl. accessory). The responsible body must check and apply the national regulations applicable for it accordingly.
- The temperature control unit complies with all applicable safety standards.
- Your system, which uses our temperature control unit, must be equally safe.
- The responsible body must design the system to ensure it is safe.
- Huber is not responsible for the safety of your system. The responsible body is responsible for the safety of the system.
- Although the temperature control unit provided by Huber meets all the applicable safety standards, integration into a system may give rise to hazards that are characteristic of the other system's design and beyond the control of Huber.
- It is the responsibility of the system integrator to ensure that the overall system, into which this temperature control unit is integrated, is safe.
- The >Mains isolator< [36] (if present) can be locked in the off position to facilitate safe system installation and maintenance of the temperature control unit. It is the responsibility of the responsible body to develop any lock-out/tag-out procedure for the energy source in accordance with local regulations (e.g. CFR 1910.147 for the US).

1.4.1.1 Proper disposal of resources and consumables

Do comply with all national disposal regulations applicable for you. Contact your local waste management company for any questions concerning disposal.

Overview	Material / Aids	Disposal / Cleaning
	Packaging material	Keep the packaging material for future use (e.g. transport).
	Thermal fluid	Please refer to the safety data sheet of the thermal fluid used for information on its proper disposal. Use the original thermal fluid container when disposing it.
	Filling accessories, e.g. beaker	Clean the filling accessories for reuse. Make sure that the materials and cleaning agents used are properly disposed of.
	Aids such as towels, cleaning cloths	Tools used to take up spilled thermal fluid must be disposed of in the same fashion as the thermal fluid itself. Tools used for cleaning must be disposed of depending on the cleaning agent used.
	Cleaning agents such as stainless steel cleaning agents, sensitive-fabrics detergents	Please refer to the safety data sheet of the cleaning agent used for information on its proper disposal. Use the original containers when disposing of large quantities of cleaning agents.
	Consumables such as air filter mats, temperature control hoses	Please refer to the safety data sheet of the consumables used for information on their proper disposal.

1.4.1.2 Temperature control units with refrigerants

1.4.1.2.1 General information

In the following sections we would like to inform you about the refrigerants used. The sections serve to acquaint you as the operating company with some of the necessary responsibilities.

All Huber temperature control units are designed for easy installation at the place of installation.

NO gas detection sensor is installed in this temperature control unit!

Huber offers suitable gas detection sensors and analysis units that can be installed in the building.

The company operating the system is responsible for: The correct installation of the temperature control unit in accordance with the respective national laws and local regulations.

1.4.1.2.1.1 *Temperature control unit with natural refrigerants*

Temperature control unit with natural refrigerants (NR)



Since 1980, Huber temperature control units with natural refrigerants work with repeatedly proven, safe and highly-sustainable technologies. The temperature control unit has been constructed to the requirements of EU and EFTA countries. The relevant standards and regulations for temperature control units with natural refrigerants contain a number of stipulations, the importance of complying with which is set out below.

Temperature control units with water cooling can be connected to a building’s exhaust air system. Temperature control units with air cooling discharge the exhaust air directly from the temperature control unit to the place of installation.

Huber offers suitable gas detection sensors and analysis units that can be installed in the temperature control unit or in the building.

- The cooling circuit is permanently technically tight.
- The temperature control unit is a permanently closed individual compact unit (i.e. a functional unit inside a housing).
- The quantity of the refrigerant is minimized (in “systems with limited filling capacity”). The filling capacity of the refrigerant is specified on the data sheet and on the rating plate.
- The refrigerant circuit must be maintained during the service life of the temperature control unit.

1.4.1.2.2 Obligations of the responsible body



WARNING

Exceedance of the refrigerant limit value per m³ ambient air

DEATH OR SERIOUS INJURY DUE TO EXPLOSION OR SUFFOCATION

- Observe the amount of refrigerant contained (see data sheet/rating plate of the temperature control unit) and the room size when installing the temperature control unit.
- National laws and local regulations can demand additional safety measures for the place of installation.
- The temperature control unit is not approved for operation **in an ATEX zone**.

1.4.1.2.2.1 *Example of the place of installation*

This section is valid for: Temperature control units with refrigerants

The following enumeration only provides an incomplete overview of possible requirements.

Among others, the following must be observed at the planned place of installation of the temperature control unit with refrigerant:

- Limitation of the refrigerant filling capacity in relation to the room size.
- Installation inside a machinery room.
- Monitoring by means of a gas detection sensor.
- Conditions for outdoor installation.
- All poles are switched off in the event of a fault.

The respective national laws and local regulations must be observed.

1.4.1.2.2.2 Connection >Exhaust air< [105] on the temperature control unit

This section is valid for: Temperature control unit with natural refrigerants (except CO₂ and table-top units)

The temperature control unit is prepared to enable connection to a building's exhaust air system. To this end, the cover at the >Exhaust air< [105] connection must be removed.

Connection of the building's exhaust air system (if necessary):

The building's exhaust air system is connected to the temperature control unit by means of the >Exhaust air< [105] connection (DN 100). For the exact position please refer to the wiring diagram.
→ Section »Annex« in the operation manual of the temperature control unit.

PROCEDURE

- Remove the cover at the >Exhaust air< [105] connection. This cover must only be removed when the building's exhaust air system is used!
- Connect the >Exhaust air< [105] connection on the temperature control unit with the building's exhaust air system.

1.4.1.2.2.3 Temperature control units with optional gas detection sensor

This section is valid for: Temperature control unit with natural refrigerants (except CO₂ and table-top units)

A mounting plate onto which the optionally available gas detection sensor can be mounted is integrated in the temperature control unit. The operating company must: Install this gas detection sensor, establish its external electrical connection and check its function.

INFORMATION

For more detailed information, please refer to the Huber installation guide and the manufacturer's documentation for the gas detection sensor.

Function:

- The cable entry for the gas detection sensor connection is marked in the wiring diagram.
- The gas detection sensor enables a safety shutdown at 20% of the lower explosive limit. The operating company must install a power disconnect for this purpose.
- Further information on the gas detection sensor:
 - A **24 V DC** external power supply must be available for the gas detection sensor. The alarm output of the gas detection sensor uses a 4 - 20 mA signal. Please refer to the data sheet of the gas detection sensor for the technical information necessary for installation and operation. The operating company is responsible for this and for the other measures.
 - The operating company is responsible for the **calibration of the gas detection sensor** prior to initial operation and the observance of calibration and maintenance intervals according to the manufacturer's operation manual. We recommend to set calibration and maintenance intervals between 6 and 12 months if no information is provided. For increased safety requirements, shorter intervals can be specified. On request we will recommend a specialist company to carry out the calibration and maintenance.

Processing unit for gas detection sensor:

On request, a **separate processing unit is available as an accessory** for the control of the power disconnect relay. The processing unit provides a potential-free switching contact and simultaneously provides the power supply and analysis of the gas detection sensor. Both variants require the operating company to provide the necessary dimensioning and installation. The alarm of the gas detection system can be connected to the operating company's alarm control unit. The operating company is responsible for this and for the other measures.

1.4.2 Requirements for operators

Work on the temperature control unit is reserved for appropriately qualified specialists, who have been assigned and trained by the responsible body to do so. Operators must be at least 18 years old. Under 18-year olds may operate the temperature control unit only under the supervision of a qualified specialist. The operator is responsible vis-a-vis third-parties in the work area.

1.4.3 Obligations of the operators

Carefully read the operation manual before operating the temperature control unit. Please observe the safety instructions. When operating the temperature control unit, wear appropriate personal protective equipment (e.g. safety goggles, protective gloves, non-slip shoes).

1.5 General information

1.5.1 Description of workstation

The workstation is located at the control panel in front of the temperature control unit. The workstation is determined by the customer's connected peripheries. Accordingly, it must be designed safe by the responsible body. The workstation design also depends on the applicable requirements of the German occupational health and safety regulations [BetrSichV] and the risk analysis for the workstation.

1.5.2 Safety devices to DIN 12876



The temperature control unit is operated with a heating element without additional protection.

RISK OF INJURY

- The temperature control unit does **not** have an overtemperature protection and must be **additionally protected** when used with heating elements.
- Note the temperature control unit's maximum operating temperature. For the values, refer to the datasheet. → From page 46, section »Annex«.

The rating of your temperature control unit is stated on the data sheet in the appendix.


Rating of laboratory thermostats and laboratory baths

Classification	Temperature control medium	Technical requirements	Identification ^{d)}
I	Non-combustible ^{a)}	Overheat protection ^{c)}	NFL
II	Combustible ^{b)}	Adjustable overheat protection	FL
III	Combustible ^{b)}	Adjustable overtemperature protection and additional low-level protection	FL

^{a)} Usually water; other fluids only if non-combustible even within the temperature range of an individual fault.
^{b)} The temperature control media must have a fire point of ≥ 65 °C.
^{c)} The overheat protection can, for instance, be realized using a suitable fill level sensor or a suitable temperature limiter.
^{d)} Optional at the choice of the manufacturer.

- Temperature control units with heating correspond to class number III/FL. These temperature control units are characterized by an "H" in the device name.
- Temperature control units without heating correspond to class number I/NFL.

Overview of the temperature thresholds. The setpoint can only be changed for temperature control units with MPC controller

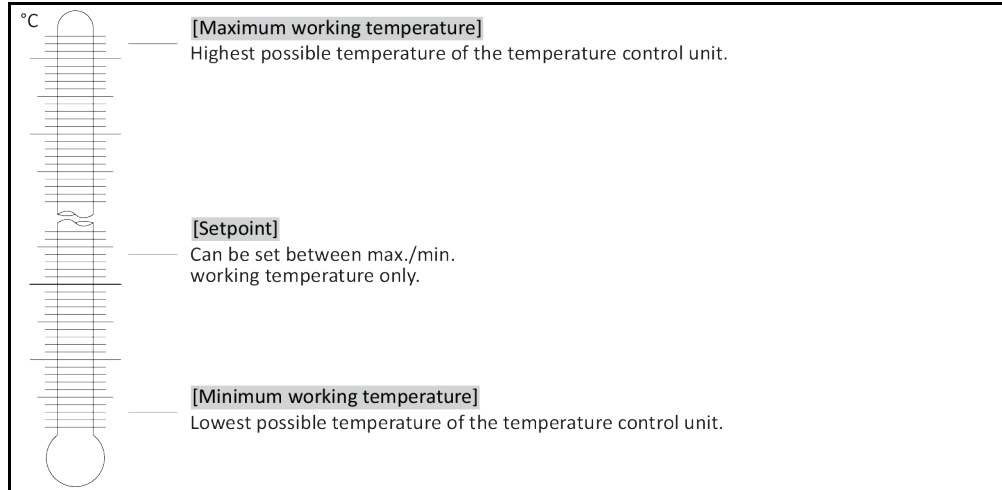

1.5.3 Further protective devices

INFORMATION

Emergency strategy – interrupt the power grid connection!

To determine the type of switch used or the switch combination installed, please refer to the connection sketch. → From page 46, section »Annex«.

Overview of switch types

Switch	Designation	Interrupting the power grid connection
	>Mains isolator< [36] (red-yellow) or >Mains isolator< [36] (grey)	Turn the >Mains isolator< [36] to the "0" position.
	>Mains isolator< [36] (red-yellow) and additional >Appliance switch< [37] (gray):	Turn the >Mains isolator< [36] to the "0" position, then the >Appliance switch< [37] to the "0" position.
	>Emergency stop switch< [70] (red-yellow) and >Mains isolator< [36] (gray):	Press the >Emergency stop switch< [70], then set the >Mains isolator< [36] to the "0" position.
	>Power switch< [37]	Power connection via socket: Pull the plug, then set the >Power switch< [37] to the "0" position. Connection via hard wiring: Use the building's circuit breaker, then set the >Power switch< [37] to the "0" position.
–	Without a switch or inside a protective housing	Power connection via socket: Pull the plug. Power connection via hard wiring: Use the building's circuit breaker.

1.5.3.1 Power interruption

Following a power outage (or when switching on the temperature control unit), this function can be used to determine how the temperature control unit is supposed to respond.

Auto start function switched off

The temperature control is started only by manual input when the temperature control unit is turned on.


Auto start function switched on

The temperature control unit is set to the same state it was in before the power outage. For example, before the power outage: Temperature control is off; after power outage: Temperature control is off. If temperature control was active during a power outage, the process will automatically continue after the power outage.


→ Page 32, section »Changing the Auto-Start function«.

1.6 Exemplary illustrations of the cooling variants


Example: Air and water cooling

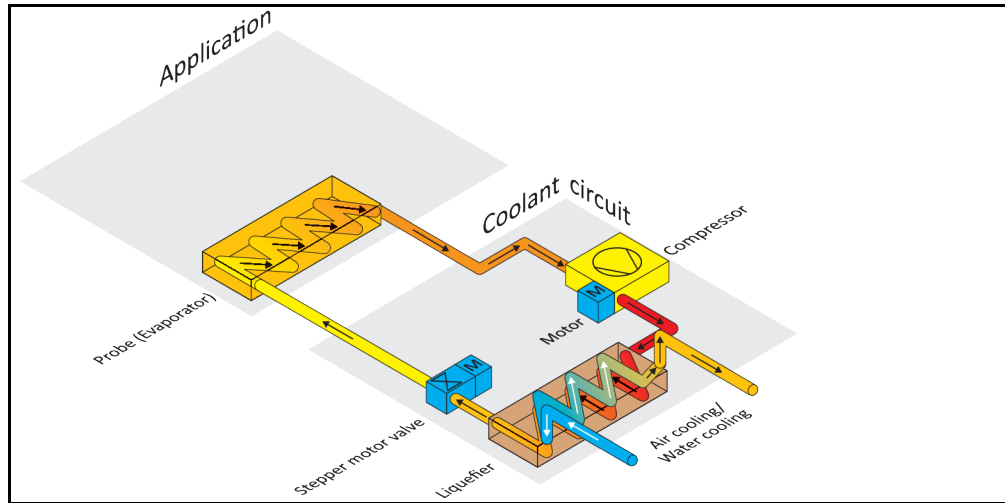

Air cooling: Air inlet

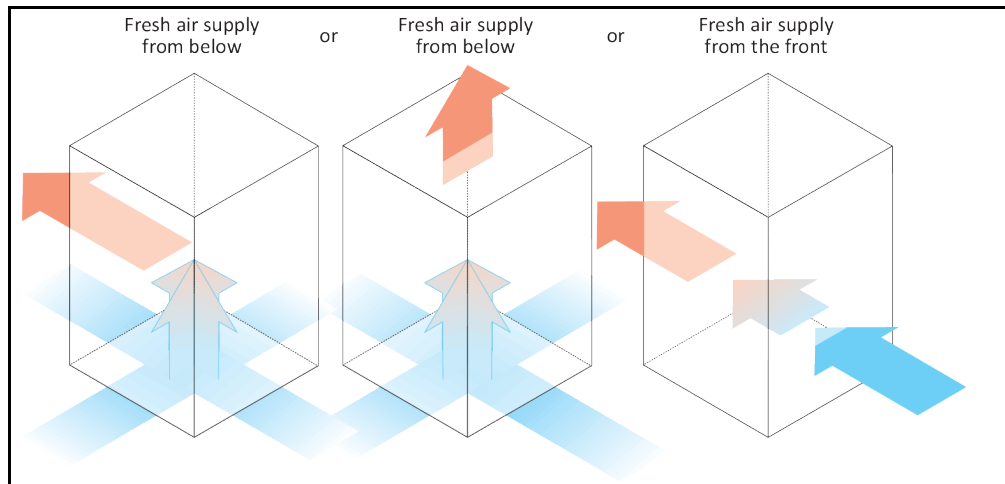

Water cooling: Water connection

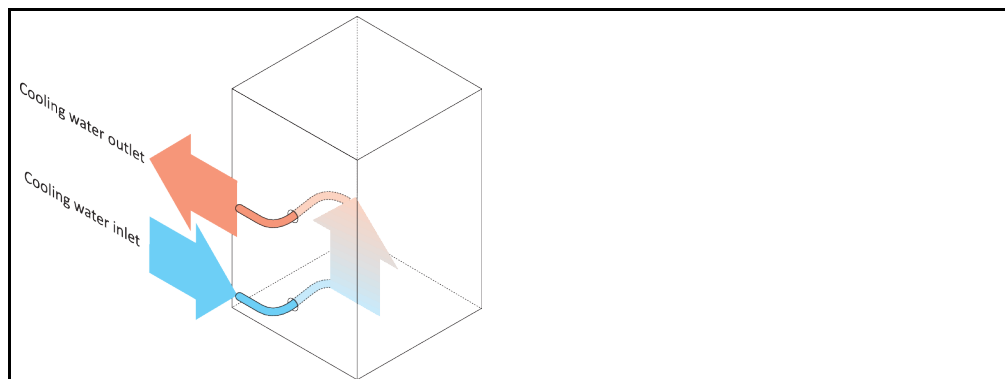

2 Commissioning

2.1 In-plant transport

WARNING

Temperature control unit is not transported / moved according to the specifications in this operation manual

DEATH OR SERIOUS INJURY DUE TO CRUSHING

- Always transport / move the temperature control unit according to the specifications in this operation manual.
- Wear personal protective equipment during transport.
- Always work with the specified number of persons when moving the temperature control unit on casters (if any).
- If the temperature control unit is equipped with casters and parking brakes: 2 parking brakes are always freely accessible when moving the temperature control unit. Activate the **2 parking brakes** in an emergency! If only **one** parking brake is activated on the casters in an emergency: The temperature control unit is not stopped but rotates around the axis of the caster with the activated parking brake!

NOTE

Temperature control unit transported in a horizontal position

DAMAGE TO THE COMPRESSOR

- Only transport the temperature control unit in an upright position.

NOTE

Filled temperature control unit is transported

MATERIAL DAMAGE DUE TO OVERFLOWING THERMAL FLUID

- Only transport an emptied temperature control unit.

- If available, use the lugs on the top side of the temperature control unit for transportation.
- Use an industrial truck for transport.
- The casters (if present) on the temperature control unit are not suitable for transport. The casters are symmetrically loaded with 25% of the total mass of the temperature control unit.
- Remove the packing material (e.g. the palette) only at the place of installation.
- Protect the temperature control unit from transport damage.
- Do not transport the temperature control unit alone and without aids.
- Check the load bearing capacity of the transportation route and the place of installation.
- The parking brakes at the casters (if any) must be activated and/or the leveling feet (if any) must be unscrewed/activated before the temperature control unit is put into operation. → Page 27, section »Unscrewing/activating the leveling feet (if any)«.

2.1.1 Lifting and transporting the temperature control unit

2.1.1.1 Temperature control unit without lifting eyes

- Do not lift and transport the temperature control unit alone and without aids.
- Lift and transport the temperature control unit only with an industrial truck.
- The industrial truck must have a lifting force equal to or greater than the weight of the temperature control unit. See the data sheet for the weight of the temperature control unit. → From page 46, section »Annex«.

2.1.2 Positioning the temperature control unit

2.1.2.1 Temperature control unit with casters

- Do **not** use the casters for the transportation to the place of installation. → Page 21, section »Lifting and transporting the temperature control unit«.
- Use the casters only for positioning at the place of installation.
- Only ever move the temperature control unit on the casters if the surface is level, without gradient, non-slip and stable.
- Do not move the temperature control unit alone.

- **At least 2 persons** are required to move the temperature control unit on casters. **At least 5 persons** are required to move the temperature control unit on the casters if the total weight of the temperature control unit is **over 1.5 tons**.
- The parking brakes must be activated at the casters and/or the feet (if present) must be unscrewed/activated before the temperature control unit is put into operation. → Page 27, section »**Unscrewing/activating the leveling feet (if any)**«.

2.1.2.2 Temperature control unit without casters

- An industrial truck must be used for positioning the temperature control unit.
- Do not move the temperature control unit alone.
- **At least 2 persons** are required to move the temperature control unit.
- The industrial truck must have a lifting force equal to or greater than the weight of the temperature control unit. See the data sheet for the weight of the temperature control unit. → From page 46, section »**Annex**«.
- The leveling feet (if present) must be unscrewed/activated before the temperature control unit is put into operation. → Page 27, section »**Unscrewing/activating the leveling feet (if any)**«.

2.2 Unpacking



WARNING

Starting up a damaged temperature control unit

DANGER TO LIFE FROM ELECTRIC SHOCK

- Do not operate a damaged temperature control unit.
- Please contact Customer Support. → Page 45, section »**Contact data**«.

PROCEDURE

- Check for damage to the packaging. Damage can indicate material damage to the temperature control unit.
- Check for any transport damage when unpacking the temperature control unit.
- Always contact your forwarding agent regarding the settlement of claims.
- Observe the proper disposal of packaging material. → Page 15, section »**Proper disposal of resources and consumables**«.

2.3 Ambient conditions



CAUTION

Unsuitable ambient conditions / unsuitable installation

SERIOUS INJURY DUE TO CRUSHING

- Comply with all requirements! → Page 22, section »**Ambient conditions**« and → Page 24, section »**Installation conditions**«.

INFORMATION

Make sure there is adequate fresh air available at the site for the circulation pump and the compressors. The warm exhaust air must be able to escape upwards unhindered.

Free-standing models

For the connection data, see the data sheet. → From page 46, section »**Annex**«.

Use of the temperature control unit is permitted only under normal ambient conditions in accordance with the currently valid DIN EN 61010-1.

- Use only indoors. The illuminance must be at least 300 lx.
- Installation altitude up to 2,000 meters above sea level.
- Maintain wall and ceiling clearance for adequate air exchange (dissipation of waste heat, supply of fresh air for the temperature control unit and work area). Ensure adequate floor clearance for air-cooled temperature control units. Do not operate this temperature control unit from within the box or with an inadequately dimensioned bath. This inhibits the air exchange.
- Ambient temperature values are provided on the technical data sheet; to ensure trouble-free operation, compliance with the ambient conditions is mandatory.
- Relative humidity max 80% to 32 °C and 40 °C decreasing linearly to 50%.

- Short distance to supply connections.
- The temperature control unit must not be installed so as to hinder or even prevent access to the disconnecting device (to the power supply).
- For the magnitude of the mains voltage fluctuations, refer to the datasheet. → From page 46, section »Annex«.
- Transient surges, as would normally occur in the power supply system.
- Installation Class 3
- Applicable degree of soiling: 2.
- Surge category II.

Please also note: → Page 20, section »Exemplary illustrations of the cooling variants«.

Wall clearances		
Side		
	[A2] Top	free standing
	[B] Left	min. 20
	[C] Right	min. 20
	[D] Front	min. 20
	[E] Rear	min. 20
Side		
	[A2] Top	free standing
	[B] Left	min. 20
	[C] Right	min. 20
	[D] Front	min. 20
	[E] Rear	min. 20

2.3.1 EMC-specific notes

INFORMATION

Connecting cables in general

Prerequisites for a failure-free operation of the temperature control units incl. their connections with external applications: Installation and wiring must be carried out professionally. Related topics: "Electrical safety" and "EMC-compliant wiring".

Cable lengths

For flexible/fixed cable routing of more than 3 meters, the following must amongst other things be observed:

- Equipotential bonding, grounding (see also technical data sheet "Electromagnetic compatibility EMC")
- Compliance with "external" and/or "internal" lightning/overvoltage protection.
- Design protection measures, professional cable selection (UV resistance, steel pipe protection, etc.)

Attention:

The operating company is responsible for compliance with national/international directives and laws. This also includes the testing of the installation/wiring required by law or standards.

This device is suitable for operation in “**industrial electromagnetic environments**”. It meets the “**immunity requirements**” of the currently applicable **EN61326-1**, which are required for this environment.

It also meets the “**interference emission requirements**” for this environment. It is a **Group 1** and **Class A** device according to the currently applicable **EN55011**.

When operating the temperature control unit in another environment, its electromagnetic compatibility can in rare cases not be ensured.

Group 1 specifies that high frequency (HF) is only used for the function of the device. **Class A** defines the interference emission limits to be observed.

2.4 Installation conditions



WARNING

Temperature control unit is connected to the power supply line
DEATH FROM ELECTRICAL SHOCK BY DAMAGE TO THE POWER CABLE.

- Do not put temperature control unit on power cable.



CAUTION

Operating the temperature control unit fitted with casters without brakes activated
CRUSHING OF LIMBS

- Activate brakes on the casters.

- Allow the temperature control unit to acclimate for about 2 hours when changing from a cold to a warm environment (or vice versa). Do not turn on the temperature control unit before!
- Install upright, stable and tilt-resistant.
- Use a non-combustible, sealed foundation.
- Keep the environment clean: Prevent slip and trip hazards.
- Wheels, if installed, must be locked after installation!
- Spilled/leaked thermal fluid must be removed immediately. Observe the proper disposal of thermal fluid and aids. → Page 15, section »**Proper disposal of resources and consumables**«.
- Observe the floor load bearing capacity for large units.
- Observe the ambient conditions.

2.5 Recommended cooling water hoses



CAUTION

Use of unsuitable/defective hoses and/or hose connections
INJURIES

- Reinforced hoses must be used to satisfy tougher safety requirements.
- Shut off the cooling water supply to the temperature control unit even for shorter downtimes (e.g. overnight).



CAUTION

Hot or cold thermal fluid and surfaces
BURNS TO LIMBS

- Avoid direct contact with the thermal fluids or the surfaces.
- Wear your personnel protective equipment (e.g. temperature-resistant safety gloves, safety goggles, safety footwear).

- We **exclusively** recommend reinforced hoses for connecting to the cooling water supply. Cooling water hoses can be found in the Huber catalog under Accessories.

2.6 Wrench sizes and torques

Observe the proper wrench sizes for the pump connection at the temperature control unit. The following table lists the pump connections and the resulting wrench sizes, as well as the torque values. Always perform a leak test afterwards and re-tighten the connections if required. The values of the maximum torques (see table) must **not** be exceeded. Protect the pump connections against undue twisting by counterholding.

Overview
wrench sizes and
torques

Connection	Sleeve nut wrench size	Connector wrench size	Recommended torques in Nm	Maximum torques in Nm
M16x1	19	17	30	35
M24x1.5	27	27	47	56
M30x1.5	36	32	79	93
	36	36	79	93
M38x1.5	41/46	46	130	153
M45x1.5	50	50	200	210
G-thread (flat-sealing)	Adapt the torque to the material of the flat seal used. First hand-tighten the temperature control hose. When using adapters, do not overtighten the G-thread on the pump connection when connecting a temperature control hose. When connecting a temperature control hose to the adapter piece, secure the G-thread against overtightening.			

2.7 Temperature control units with water cooling

WARNING

Open electrical wires below the temperature control unit if the temperature falls below the dew point.

DEATH FROM ELECTRICAL SHOCK BY WATER ENTRY INTO THE ELECTRIC LINES.

- A temperature below the dew point may result in condensation in the temperature control unit and at the cooling water connections. The condensation is caused by high humidity at the cooling water-bearing components. The condensation exists the temperature control unit at the bottom.
- Electrical lines directly below the temperature control unit must be protected against liquid ingress.

CAUTION

Use of unsuitable/defective hoses and/or hose connections

INJURIES

- Reinforced hoses must be used to satisfy tougher safety requirements.
- Shut off the cooling water supply to the temperature control unit even for shorter downtimes (e.g. overnight).

NOTE

No protection against corrosion

DAMAGE TO THE TEMPERATURE CONTROL UNIT

- The addition of anti-corrosion agents is mandatory if salts (chlorides, bromide) have been added to the water circuit.
- Ensure that the materials used in the cooling water circuit are resistant with respect to the cooling water. For information on materials used see the data sheet. → From page 46, section »Annex«.
- Take suitable measures to maintain the warranty conditions.
- For information about water quality, see www.huber-online.com.


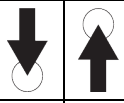
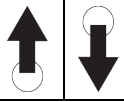

NOTE

Usage of un-filtered river/sea or ocean water as cooling water


DAMAGE TO THE TEMPERATURE CONTROL UNIT

- Un-filtered river or sea water is not suitable for use as cooling water due to its contaminants.
- Use drinking water or filtered river or sea water for cooling.
- Sea water must not be used for water cooling.
- For information about water quality, see www.huber-online.com.

The following icons can be found near the cooling water connection on the temperature control unit. The table gives an overview of the icons used.

Icon	Description
	Cooling water connection
	Cooling water inlet
	Cooling water outlet
	Cooling water drain

Installing a suction strainer (table-top models only)

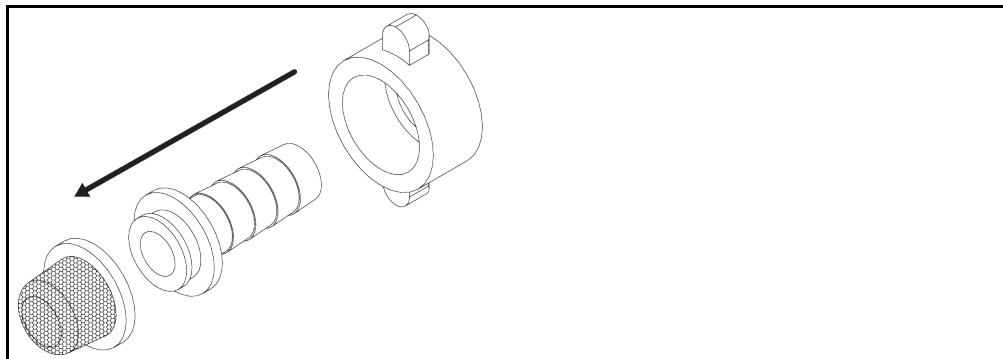

Preparing the temperature control unit with water cooling:

INFORMATION

To minimize cooling water consumption, Huber temperature control units with water cooling are equipped with a cooling water regulator. It limits the flow of cooling water to the amount required by the current load situation of the temperature control unit. If only a low cooling capacity is requested, only a small amount of cooling water is consumed. It cannot be ruled out that cooling water flows when the machine is switched off. Shut off the cooling water supply to the temperature control unit even for shorter downtimes (e.g. overnight).

Use of drinking water for water cooling purposes: A backflow from the cooling water line into the drinking water supply must be prevented on the building side. The responsible body must check and apply the national regulations applicable for it accordingly.

In the event of outdoor installation, the responsible body must ensure that the cooling water supply and return lines are laid frost-protected. The cooling water temperature must not fall below 3 °C. At ambient temperatures below 3 °C, the cooling water supply must be heated.

The minimum pressure differential in the cooling water circuit and the recommended cooling water inlet temperature can be found on the data sheet. → From page 46, section »Annex«.

Observe the wiring diagram. → From page 46, section »Annex«.

PROCEDURE

- Close (if present) the >Cooling water drain< [15].
- Connect the >Cooling water outlet< [14] to the water return flow. A seal must be used for this.
- Insert the suction strainer (dirt trap) into the >Cooling water inlet< [13].
- Connect the >Cooling water inlet< [13] to the water supply.

NOTE**Leaking cooling water connections****DAMAGE BY FLOODING OF ROOMS**

- Slowly open the building-side isolating valves of the cooling water supply and return line.
- If water leaks from the cooling water connections: Shut off the cooling water supply and return line immediately.
- Provide leakproof cooling water connections.

- Open the shut-off valves in the water line on the temperature control unit (if present) and on the building side.
- Check the connections for leaks.

2.8 Preparations for operation

2.8.1 Unscrewing/activating the leveling feet (if any)

WARNING**The leveling feet are not unscrewed/activated before switching on the temperature control unit****DEATH OR SERIOUS INJURY DUE TO CRUSHING**

- The parking brakes must be activated at the casters (if any) and/or the leveling feet must be unscrewed/activated before the temperature control unit is put into operation.
- The temperature control unit may move if the parking brakes of the casters (if any) are not activated and/or the leveling feet are not unscrewed/activated.

Always unscrew/activate the leveling feet before switching on the temperature control unit. Uneven floors can be compensated by adjusting these leveling feet.

PROCEDURE

- Verify that the parking brakes of the casters (if any) have been activated.
- Unscrew the leveling feet.
- Compensate uneven floors by adjusting these leveling feet, if necessary. Use a spirit level to horizontally align the temperature control unit.
- Tighten the lock screws on the leveling feet after aligning the temperature control unit. This prevents the leveling feet from changing their height during operation.

2.8.2 Use of the Probe [67]

Observe the wiring diagram. → From page 46, section »Annex«

CAUTION**The >Probe< [67] is touched in icy condition****SEVERE FROSTBITES CAUSED BY HOUSING PARTS**

- The >Probe< [67] must not be touched in icy condition.
- Wear your personnel protective equipment (e.g. temperature-resistant safety gloves, safety goggles, safety footwear).

NOTE**The protective and insulating hose is twisted or bent****DAMAGE TO THE TEMPERATURE CONTROL UNIT**

- Ensure the protective and insulating hose is never bent or twisted.


NOTE**The protective and insulating hose is immersed into the thermofluid****DAMAGE TO THE TEMPERATURE CONTROL UNIT**

- Ensure the protective and insulating hose is not immersed into and does not come into contact with the thermofluid.

NOTE**During operation, the cooling coil/flexible probe is moved/bent.****MATERIAL DAMAGE CAUSED BY INTERNAL FRACTURE**

- The cooling coil/flexible probe must only be moved/bent if the temperature of the cooling coil/flexible probe is at room temperature and the temperature control unit is not in operation.

Exemplary representation

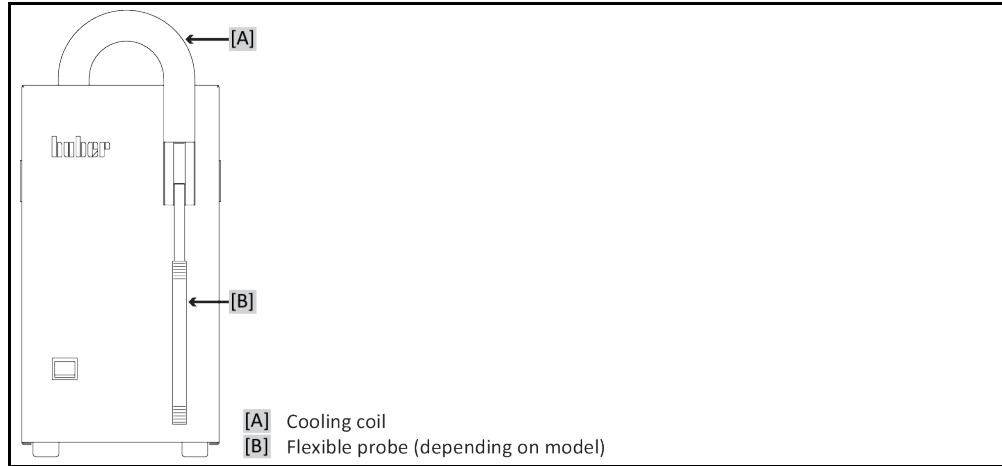

The minimum bending radius of the cooling coil during operation is 100 mm and **must never** be smaller.

Valid for temperature control units with MPC controller:

Controlling the temperature requires the Pt100 process control sensor to be connected to the socket **>Pt100 Process<** [49]).

2.8.2.1 Immersion depth of the probe [67]

Ensure that the **>Probe<** [67] is immersed into the thermal fluid to be cooled at least up to the upper end of the cooling coil. Otherwise, ice crystals will form on the **>Probe<** [67], resulting in an inferior transmission of energy. The cooling coil must **not** be moved/bent during operation.

Model F (with flexible >Probe< [67]):

Never use a bending radius of less than 40 mm when bending the flexible **>Probe<** [67]. The flexible probe must **not** be moved/bent during operation.

2.8.3 Connecting the functional ground

PROCEDURE

- If required, connect the temperature control unit's **>Functional ground terminal<** [87] to the building's grounding point. Depending on the design, there may be another functional ground terminal on the switch cabinet. Use a ground strap in each case. For the exact positions please refer to the wiring diagram. → From page 46, section **»Annex«**.

2.9 Connecting to the power supply

INFORMATION

Based on local circumstances, it may be that you need to use an alternative power cable instead of the supplied original power cable. Do not use a power cable that is longer than **3 m** to be able to disconnect the temperature control unit at any time from the mains. Have the mains cable only replaced by a qualified electrician.

2.9.1 Connection using socket with protective earth (PE)



Connecting to a power socket without protective earth (PE)

MORTAL DANGER FROM ELECTRIC SHOCK

- Always connect the temperature control unit to safety sockets (PE).

DANGER

Damaged power cable/power cable connection
MORTAL DANGER FROM ELECTRIC SHOCK

- Do not start up the temperature control unit.
- Isolate the temperature control unit from the power supply.
- Have the power supply cable/power supply connection replaced and inspected by an electrician.
- Do not use a power cable that is longer than **3 m**.

NOTE

Incorrect power supply connection
DAMAGE TO THE TEMPERATURE CONTROL UNIT

- Your building's existing power supply voltage and frequency must match the data provided on the rating plate of the temperature control unit.

INFORMATION

In case of uncertainties about an existing protective earth (PE), have the connection inspected by an electrician.

2.9.2 Connection via hard wiring

DANGER

Connection/adjustment to the power supply not carried out by an electrician
MORTAL DANGER FROM ELECTRIC SHOCK

- Have the connection/adjustment to the power supply carried out by an electrician.

DANGER

Damaged power cable/power cable connection
MORTAL DANGER FROM ELECTRIC SHOCK

- Do not start up the temperature control unit.
- Isolate the temperature control unit from the power supply.
- Have the power supply cable/power supply connection replaced and inspected by an electrician.
- Do not use a power cable that is longer than **3 m**.

NOTE

Incorrect power supply connection
DAMAGE TO THE TEMPERATURE CONTROL UNIT

- Your building's existing power supply voltage and frequency must match the data provided on the rating plate of the temperature control unit.

3 Function description

3.1 Function description of the temperature control unit

3.1.1 General functions

The temperature control unit is especially suited for cooling applications.
The temperature control unit is solely intended as a cooling device and must not be used for heating.

3.1.2 Other functions

Valid for temperature control units with MPC controller:

The **LED display** shows the current temperature. A new setpoint can be easily entered with a simple keyboard.

A **connection jack for Pt100 process controller sensor** enables you to accomplish **external temperature control tasks** with ease.

3.2 Information on the thermal fluids

CAUTION

Non-compliance with the safety data sheet for the thermal fluid to be used

INJURIES

- Risk of injury to the eyes, skin, respiratory tract.
- The safety data sheet for the thermal fluid to be used must be read prior to using it and its content must be respected.
- Observe the local regulations/work instructions.
- Wear your personal protective equipment (e.g. temperature-resistant safety gloves, safety goggles, safety footwear).
- Danger of slipping because floor and work area are contaminated. Clean the workplace; observe the proper disposal of thermal fluid and aids. → Page 15, section »Proper disposal of resources and consumables«.

NOTE

Non-compliance with the compatibility between the thermal fluid and your temperature control unit

MATERIAL DAMAGE

- Observe the classification of your temperature control unit according to DIN 12876.
- Ensure the following materials are resistant with respect to the thermal fluid: Stainless steel 1.4301/ 1.4401 (V2A).

NOTE

Mixing different thermofluids in a thermal fluid circuit

PROPERTY DAMAGE

- Do **not** mix different types of thermofluid (such as mineral oil, silicone oil, synthetic oil, water, etc.) in a thermofluid circuit.
- The thermal fluid circuit **must** be rinsed when changing from one type of thermal fluid to another. No residues of the previous type of thermal fluid may remain in the thermal fluid circuit.

INFORMATION

For thermal fluids we recommend the media listed in the Huber catalog. The name of a thermal fluid is derived from its working temperature range and its viscosity at 25 °C.

Thermal fluid: Water

Designation	Specification
Thermal fluid: Water without ethylene glycol	
Use	do not use
Thermal fluid: Water-ethylene glycol mixture	
Use	do not use

3.3 To be noted when planning the test

INFORMATION Observe the intended operation. → Page 13, section »Proper operation«.

The focus is on your application. Bear in mind that the system performance depends on the temperature.


- Make sure that the electrical connection is adequately dimensioned.
- The installation location of the temperature control unit should be selected so as to ensure adequate fresh air, even with water-cooled chillers.
- The thermal fluid used must be chosen to not only allow the minimum and maximum working temperature but it must also be suitable with regard to the fire point, boiling point and viscosity. In addition, the thermal fluid must be compatible with all the materials in your system.
- Avoid bending the cooling coil and cooling water hoses (if required). Use suitable angle pieces and lay the hose connections with a large radius. Take the minimum bending radius from the data sheet of the coolant hoses used.
- Avoid bending/moving the cooling coil in a cold state.
- Check the hoses at regular intervals for any material fatigue (e.g. cracks, leaks).
- Water as well as water and anti-freeze mixes must not be used as thermal fluids!
- Basically, you should only use the thermal fluids recommended by the manufacturer and only within the usable temperature and pressure range.

INFORMATION For water-cooled temperature control units, please take the cooling water temperature necessary for perfect operation and the required differential pressure from the data sheet. → From page 46, section »Annex«.

3.4 Only valid for temperature control units with MPC controller:

3.4.1 Display and control instruments

The control panel:
Displays and keys

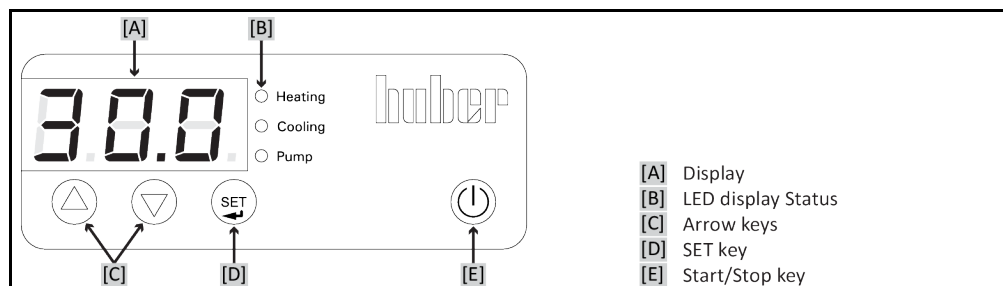

3.4.1.1 Display

The value of the internal temperature is displayed. For example, this is the bath temperature for temperature control units with a bath, or the flow temperature of chillers. Different key combinations also display the setpoint, a menu item or settings.

3.4.1.2 LED display status

These LEDs indicate the current operating condition.

3.4.1.3 Arrow keys

These keys are used to (▲) increase (up) or (▼) decrease (down) the setpoint or select or change a menu item. The >Arrow keys< [C] are also required to call up the menu.

3.4.1.4 SET key

The >SET key< [D] is used to switch to the setpoint temperature. It is used to display and modify the setpoint temperature. The >SET key< [D] is also used to display the values of the various menu items.





3.4.1.5 Start/Stop key

This key starts or stops the thermoregulation.

3.4.2 Menu function

Your temperature control unit is equipped with a menu function.

Overview of the menu items

Menu item	Display	Description
ADR		Without a function
C40		Auto-Start function
PA		Service menu Only for Huber service personnel.
--		

3.4.3 Function examples

3.4.3.1 Display setpoint

PROCEDURE

- Press and hold the >SET key< [D]. The setpoint is displayed.
- Release the >SET key< [D]. The internal temperature is displayed again.

3.4.3.2 Set/change setpoint

INFORMATION

The setpoint can be changed only, when the temperature control was stopped using the [Start/Stop key].

PROCEDURE

- Press and hold the >SET key< [D]. The setpoint is displayed.
- Use the >Arrow keys< [C] to select the required setpoint.
 - ⊕ (up) the temperature value is increased, ⊖ (down) the temperature value is decreased.
- Release the >SET key< [D]. The new setpoint is set.

3.4.3.3 Changing the Auto-Start function

Following a power outage (or when switching on the temperature control unit), this function can be used to determine how the temperature control unit is supposed to respond.



Auto-Start function is turned off

The temperature control is started only by manual input when the temperature control unit is turned on.








Auto-Start function is turned on

The temperature control unit is set to the same state it was in before the power outage. For example, before the power outage: Thermoregulation is off; after power outage: Thermoregulation is off. If temperature control is active during a power outage, the process will automatically continue after the power outage.

Settings in the menu item "C40" auto-start function

Setting	Display	Description
0		The auto-start function is turned on.
1		The auto-start function is turned off.

PROCEDURE

- Press the **>Arrow keys**< [C]  and  simultaneously for 3 seconds. The display changes from the display of the temperature to the display of the first menu item.
- Press the **>Arrow key**< [C]  until the menu item "C40" is displayed.
- Press and hold the **>SET key**< [D].
- Press the **>SET key**< [C] and simultaneously the **>Arrow keys**< [C]  and . The display changes from "0" (auto-start function is ON) to "1" (auto-start function is OFF). Release the **>SET key**< [D] after the required setting was made.
- Press the **>Arrow keys**< [C]  and  simultaneously for 1 second. Or wait a few seconds after releasing the **>SET key**< [D]. The selected function is saved and the menu is exited. The display shows the temperature again.

4 Setup mode

4.1 Setup mode

CAUTION

Moving the temperature control unit during operation
SERIOUS BURNS/FREEZING OF THE HOUSING PARTS/ESCAPING THERMAL FLUID
 ➤ Do not move temperature control units that are in operation.

NOTE

During operation, the cooling coil/flexible probe is moved/bent.
MATERIAL DAMAGE CAUSED BY INTERNAL FRACTURE
 ➤ The cooling coil/flexible probe must only be moved/bent if the temperature of the cooling coil/flexible probe is at room temperature and the temperature control unit is not in operation.

4.1.1 Turning on the temperature control unit - without controller

PROCEDURE

- Switch on the temperature control unit using the >Mains isolator< [36] / >Mains switch< [37]. Temperature control starts **immediately** for single-stage cooling machines (up to TC50), in a two-stage cooling machine (from TC100) temperature control begins shortly after turning on the temperature control unit. The temperature is lowered until the heat input to the probe corresponds to the cooling capacity of the temperature control unit.

4.1.2 Turn temperature control unit off - without controller

PROCEDURE

- Switch off the temperature control unit using the >Mains isolator< [36] / >Mains switch< [37]. The temperature control stops **immediately**.

4.1.3 Turning off the temperature control unit / with controller

PROCEDURE

- Switch on the temperature control unit using the >Mains isolator< [36] / >Mains switch< [37]. Temperature control is switched **off**. The cooling capacity of the temperature control unit TC100E is available only 6 minutes after switch-on.

4.1.4 Turning off the temperature control unit - with controller

NOTE

The power supply is interrupted before the temperature control process was terminated properly
DAMAGE TO THE TEMPERATURE CONTROL UNIT
 ➤ End the temperature control process before the power supply is interrupted (by switching off or disconnecting from the voltage).

INFORMATION

Do not switch off the temperature control unit while the temperature control process is running. Only switch off the temperature control unit after the temperature control process is finished.
 → Page 35, section »Ending the temperature control process - with controller«.

PROCEDURE

- Switch off the temperature control unit using the >Mains isolator< [36]/>Mains switch< [37]. Switch off the temperature control unit only when **no** temperature control process is activated!
 → Page 35, section »Ending the temperature control process - with controller«.

5 Normal operation

5.1 Automatic operation

CAUTION

Extremely hot / cold surfaces, connections and thermal fluids

BURNS/FREEZING OF LIMBS

- Surfaces, connections and tempered thermal fluids can be extremely hot or cold depending on the operating mode.
- Avoid direct contact with surfaces, connections and thermal fluids!
- Wear your personnel protective equipment (e.g. temperature-resistant safety gloves, safety goggles).

NOTE

During operation, the cooling coil/flexible probe is moved/bent.

MATERIAL DAMAGE CAUSED BY INTERNAL FRACTURE

- The cooling coil/flexible probe must only be moved/bent if the temperature of the cooling coil/flexible probe is at room temperature and the temperature control unit is not in operation.

5.1.1 Temperature control

5.1.1.1 Starting the temperature control process - without controller

The temperature control process can be started after the probe has been placed in the thermal fluid. → Page 34, section »Turning on the temperature control unit - without controller«.

5.1.1.2 Ending the temperature control process - without controller

To stop the temperature control process, proceed as described. → Page 34, section »Turn temperature control unit off - without controller«.

5.1.1.3 Starting the temperature control process - with controller

The temperature control process can be started after the probe has been placed in the thermofluid.

PROCEDURE

- Switch on the temperature control unit. → Page 34, section »Turning off the temperature control unit / with controller«.
- Set the desired setpoint. → Page 32, section »Set/change setpoint«. The setpoint can **not** be changed while a temperature control process is running.
- With the temperature control unit switched on and the temperature control process/circulation stopped, press the **>Start/Stop button< [E]**.
The temperature control process starts.

5.1.1.4 Ending the temperature control process - with controller

Thermoregulation can be terminated at any time.

PROCEDURE

- With the temperature control unit switched on and the temperature control process/circulation running, press the **>Start/Stop button< [E]**.
Temperature control stops. The temperature control unit is in standby mode.
- Switch off the temperature control unit. → Page 34, section »Turning off the temperature control unit - with controller«.

6 Interfaces

NOTE

Connecting to the interfaces at the temperature control unit during operation

DAMAGE TO THE INTERFACES

- When devices in operation are connected with interfaces of the temperature control unit, interfaces may get damaged.
- Before connecting, ensure the temperature control unit and the device to be connected are turned off.

NOTE

The specifications of the interface used are not being met.

PROPERTY DAMAGE

- Only connect components that meet the specifications of the interface used.

INFORMATION

The interfaces used must meet the specifications of the generally accepted standards. For the exact position of the interfaces, please refer to the wiring diagram. → From page 46, section »Annex«.

6.1 Pt100 process [49].



A temperature sensor located in the connected application (Pt100, 4-wire technology, Lemosa connector) is connected to the Pt100 connection jack. The external actual temperature is then recorded and the operating temperature of the temperature control unit is permanently calculated and adjusted.

INFORMATION

Depending on the operating temperature, isolation losses and exothermic heat, the operating temperature (flow temperature) of the application can be significantly less than the setpoint of the application. In this context, safety-critical thresholds for the temperature control fluid must be strictly observed.

The control results contained in the data sheet can only be achieved with **shielded** sensor leads. We recommend the external Pt100 process control sensor from the Huber accessories program.

Pin assignment (front view)



Pin assignment

Pin	Signal
1	I+
2	U+
3	U-
4	I-

7 Service/maintenance

7.1 Electrical fuse (if available)







To find out whether your temperature control unit is equipped with fuses, refer to the “Wiring diagram”. → From page 46, section »Annex«.

The overcurrent circuit breakers for all pole breaking (L and N) are located at the back of the temperature control unit. In case of a fault (no function and no display on the temperature control unit) please first check if the overcurrent circuit breaker has tripped. If the overcurrent circuit breakers immediately trip again after the reset: Unplug the power cord and immediately contact Customer Support. → Page 45, section »Contact data«.

7.2 Display of errors - only for MPC controllers

The device displays an alarm or warning message in the event of a fault.

Overview of messages

Display	Cause	Effect, measure
 Flashing display of the temperature value	Warning: Over or under temperature.	Control continues. Setpoint limits: ± 2 K
 F1 - flashing	Error Sensor1 Break or short circuit	Control is inactive. (Pump off, compressor off, heating off) Check the sensor.
 E1 - flashing	Input E1 reports an error. a) No enable signal, level alarm b) Valid for temperature control units with heater: The internal temperature is above the set value of the overtemperature protection. The overtemperature protection was triggered.	a) Control is inactive. (Pump off, compressor off, heating off) Check level. Restart only possible when level OK. b) The value of the overtemperature protection must be above the internal temperature and/or the setpoint. Do not set the setpoint above the temperature set for the overtemperature protection.
 E2 - flashing	Input E1 reports an error. a) Pump runs and no flow or pump is running and no water pressure. b) Valid for temperature control units with heater: The internal temperature is above the set value of the overtemperature protection. The overtemperature protection was triggered.	a) Control is inactive. (Pump off, compressor off, heating off) Restart only possible by interrupting the power supply. b) The value of the overtemperature protection must be above the internal temperature and/or the setpoint. Do not set the setpoint above the temperature set for the overtemperature protection.
 E3 - flashing	Although the control is off, the input E1 signals a flow	Control is inactive. (Pump off, compressor off, heating off) The error is corrected automatically when input E1 is open in standby again.
 EP - flashing	Loss of data in the parameter memory	Control is inactive. (Pump off, compressor off, heating off)

INFORMATION

While outputting the error message, the error message alternates between the error message and the actual value.

Please check the fuses on the rear of the unit below the mains connection jack if no display appears on the controller.

If any of the above messages appear and cannot be fixed: Please contact Customer Support. → Page 45, section »Contact data«.

7.3 Maintenance

DANGER

Cleaning/maintenance while the temperature control unit is operating

MORTAL DANGER FROM ELECTRIC SHOCK

- Stop an ongoing temperature control process.
- Turn off the temperature control unit.
- Also disconnect the temperature control unit from the power supply.

NOTE

Performing maintenance work not described in these operation manual

MATERIAL DAMAGE ON THE TEMPERATURE CONTROL UNIT

- Please contact Huber for maintenance work that is not described in these operation manual.
- Maintenance work not described in these operation manual is reserved for qualified specialists trained by Huber.
- Safety-relevant components may only be replaced by equivalent ones. The specified safety values for the respective component must be observed.

7.3.1 Function check and visual inspection

Control intervals

Cooling*	Description	Maintenance interval	Comment	Person responsible
A/W	Visually inspect hoses and hose connections	Prior to switching on the temperature control unit	Exchange leaking hoses and hose connections prior to switching on the temperature control unit. → Page 39, section »Replacing coolant hoses«.	Operating company and / or operators
A/W	Check the power supply cable	Prior to switching on the temperature control unit or on relocation	Do not start the temperature control unit if the power supply cable is damaged.	Qualified electrician (BGV A3)
A	Check the liquefier fins	As required, after 3 months at the latest	→ Page 39, section »Cleaning the liquefier fins«.	Operating company and / or operators
W	Check the hat-type strainer (dirt trap)	As required, after 3 months at the latest	→ Page 39, section »Cleaning the hat-type strainer/dirt trap«.	Operating company and / or operators
A/W	Check the temperature control unit for damage and stability	Every 12 months or after a change of location		Operating company and / or operators
W	Check the cooling water quality	Every 12 months	Descale the cooling water circuit as required. Documentation on water quality is available at: www.huber-online.com	Operating company and / or operators
A/W	Exchange safety-relevant electric and electromechanical components	20 years	Have the exchange only carried out by certified personnel (such as Huber service engineers). Please contact Customer Support. → Page 45, section »Contact data«.	Operating company

*A = Air cooling; W = Water cooling; U = Applicable only for Unistats

7.3.2 Replacing coolant hoses

Replace defective coolant hoses **before** turning on the temperature control unit.

PROCEDURE

- Drain the cooling water. → Page 43, section »**Draining the cooling water**«.
- Replace the defective coolant hoses. Follow the instructions for the proper disposal. → Page 15, section »**Proper disposal of resources and consumables**«.
- Reconnect the temperature control unit to the building's cooling water supply. → Page 25, section »**Temperature control units with water cooling**«.
- Restart the temperature control unit in normal mode.

7.3.3 Cleaning the liquefier fins

Valid for air-cooled temperature control units only

CAUTION

Manual cleaning

RISK OF BEING CUT ON THE LIQUEFIER FINS

- Wear suitable cut-resistant gloves for cleaning work.
- Depending on the ambient conditions, use cleaning equipment such as vacuum cleaners and/or a hand brush/brush. Follow the local regulations when cleaning. Do not clean the liquefier fins in a clean room with items like a brush and do not use a vacuum cleaner without an extra-fine particle filter.

NOTE

Cleaning using pointed or sharp-edged tools

DAMAGE TO THE LIQUEFIER FINS

- Clean the liquefier fins using suitable cleaning appliances.

INFORMATION

Make sure there is adequate ventilation (removal of waste heat, fresh air supply) for the temperature control unit, in case of **air cooling, maintain wall clearance**. → Page 20, section »**Exemplary illustrations of the cooling variants**« and → Page 22, section »**Ambient conditions**«.
The liquefier fins must be cleaned (dust) from time to time as only then will the temperature control unit perform at its maximum cooling capacity.

PROCEDURE

Liquefier fins on lower surface

- Switch off the temperature control unit.
- Disconnect the temperature control unit from the power supply.
- Tilt the temperature control unit to its side. Make sure the cooling coil is not bent.
- Clean the liquefier fins using suitable cleaning appliances. Observe the local regulations and ambient conditions when selecting cleaning appliances.
- Make sure the liquefier fins are not damaged or deformed as this will impair the air flow.
- Put the temperature control unit upright immediately after cleaning the liquefier fins and wait for **60 minutes** to allow the compressor oil to flow back.
- Connect the temperature control unit to the power supply.
- Switch on the temperature control unit.

7.3.4 Cleaning the hat-type strainer/dirt trap

Valid for water-cooled temperature control units only

NOTE

Building's isolating valves are not closed

DAMAGE BY FLOODING OF ROOMS

- Close the building-side isolating valves of the cooling water supply and return line.
- For table-top models, place a collection container below the **>Cooling water drain<** [15]. Observe the wiring diagram: → From page 46, section »**Annex**«.

INFORMATION

Depending on the water quality, regular checking and cleaning of the strainer at the **>Cooling water inlet<** [13] is necessary. Carry out the steps "Draining the cooling water circuit", "Dismantling the cooling water inlet", "Cleaning the hat-type strainer/dirt trap" and "Installing the cooling water inlet" in succession.

INFORMATION

We would be pleased to also offer you training for the Service. Contact our Customer Support → page 45, section »Contact data«.

7.3.4.1 Draining the cooling circuit

PROCEDURE

- Switch off the temperature control unit.
- Disconnect the temperature control unit from the power supply.
- Close the building-side isolating valves of the cooling water supply and return line.
- Place a collecting container below the cooling water supply [13], [14] and [15] (if present)
- Open the **>Cooling water drain<** [15] (if present). If the temperature control unit is not equipped with a **>Cooling water drain<** [15]: Open the **>Cooling water inlet<** [13]. The cooling water will begin to drain out. Allow the cooling water to fully drain.
- Open the **>Cooling water outlet<** [14]. The cooling water will begin to drain out. Allow the cooling water to fully drain.
- Remove the collecting container below the cooling water supply [13], [14] and [15] (if present) after draining. Properly dispose of the contents of the collecting containers. → Page 15, section »Proper disposal of resources and consumables«.

7.3.4.2 Dismantling the cooling water supply

PROCEDURE

- Disconnect the **>Cooling water inlet<** [13] from the building's cooling water supply.
- Disconnect the **>Cooling water outlet<** [14] from the building's cooling water return line.
- Close the **>Cooling water drain<** [15] (if present).

7.3.4.3 Cleaning the hat-type strainer/dirt trap

- Remove the hat-type strainer from the **>Cooling water inlet<** [13].
- Clean the hat-type strainer under running water.
- Re-insert the hat-type strainer after cleaning it.

7.3.4.4 Installing the cooling water supply

- Connect the **>Cooling water inlet<** [13] to the building's cooling water supply.
- Connect the **>Cooling water outlet<** [14] to the building's cooling water return line.
- Check the connections for leaks.
- Open the building-side isolating valves of the cooling water supply and return line.

7.4 Cleaning the surfaces

CAUTION

Extremely hot / cold surfaces, connections and thermal fluids

BURNS/FREEZING OF LIMBS

- Surfaces, connections and tempered thermal fluids can be extremely hot or cold depending on the operating mode.
- Avoid direct contact with surfaces, connections and thermal fluids!
- Wear your personnel protective equipment (e.g. temperature-resistant safety gloves, safety goggles).

NOTE

Exposed plug contacts

DAMAGE CAUSED BY FLUID INGRESS

- Protect unused plug contacts with the protective caps supplied.
- Clean surfaces only with a damp cloth.

A standard stainless steel cleaning agent is suitable for cleaning the stainless steel surfaces. Carefully clean painted surfaces (damp only) using a solution of sensitive-fabrics detergent. Observe the proper disposal of thermal fluid and aids. → Page 15, section »Proper disposal of resources and consumables«.

7.5 Plug contacts

NOTE

Exposed plug contacts

DAMAGE CAUSED BY FLUID INGRESS

- Protect unused plug contacts with the protective caps supplied.
- Clean surfaces only with a damp cloth.

Protective caps are supplied for all plug contacts. Make sure that any plug contacts not required are protective with the caps.

7.6 Decontamination/repairs

CAUTION

Returning a not decontaminated temperature control unit for repair

PHYSICAL INJURY AND PROPERTY DAMAGE CAUSED BY HAZARDOUS MATERIALS IN OR ON THE TEMPERATURE CONTROL UNIT

- Carry out appropriate decontamination.
- The decontamination process depends on the type and quantity of the materials used.
- Consult the relevant safety data sheet.
- You will find a prepared return receipt at www.huber-online.com.

As the responsible body you are responsible for carrying out decontamination **before** third-party personnel come into contact with the temperature control unit / accessory. Decontamination must be carried out **before** the temperature control unit / accessory is returned for repair or inspection. Attach a clearly visible written notice stating that the temperature control unit / accessory has been decontaminated.

To simplify the process, we have prepared a form for you. This is available for download at www.huber-online.com.

8 Shutting down

8.1 Safety instructions and basic principles



DANGER

Connection/adjustment to the power supply not carried out by an electrician and/or connection to a power socket without protective earth (PE)

MORTAL DANGER FROM ELECTRIC SHOCK

- Have the connection/adjustment to the power supply carried out by an electrician.
- Always connect the temperature control unit to safety sockets (PE).



DANGER

Damaged power cable/power cable connection

MORTAL DANGER FROM ELECTRIC SHOCK

- Do not start up the temperature control unit.
- Isolate the temperature control unit from the power supply.
- Have the power supply cable/power supply connection replaced and inspected by an electrician.
- Do not use a power cable that is longer than **3 m**.



WARNING

Risk of tipping due to unstable temperature control unit

SERIOUS INJURY AND PROPERTY DAMAGE

- Avoid risk of tipping due to unstable temperature control unit.

INFORMATION

All safety instructions are important and must be followed accordingly during working operations!

8.2 Switch-off

PROCEDURE

- Turn off the temperature control unit.
- Disconnect the temperature control unit from the power supply connection.

8.3 Remove probe [67] from thermal fluid



CAUTION

The >Probe< [67] is touched in icy condition

SEVERE FROSTBITES CAUSED BY HOUSING PARTS

- The >Probe< [67] **must not** be touched in icy condition.
- Wear your personnel protective equipment (e.g. temperature-resistant safety gloves, safety goggles, safety footwear).

NOTE

The protective and insulating hose is twisted or bent

DAMAGE TO THE TEMPERATURE CONTROL UNIT

- Ensure the protective and insulating hose is never bent or twisted.

NOTE

The protective and insulating hose is immersed into the thermofluid

DAMAGE TO THE TEMPERATURE CONTROL UNIT

- Ensure the protective and insulating hose is not immersed into and does not come into contact with the thermofluid.

NOTE

During operation, the cooling coil/flexible probe is moved/bent.

MATERIAL DAMAGE CAUSED BY INTERNAL FRACTURE

- The cooling coil/flexible probe must only be moved/bent if the temperature of the cooling coil/flexible probe is at room temperature and the temperature control unit is not in operation.

Observe the wiring diagram. → Page 46, section »Annex«.

The >Probe< [67] must only be removed from the thermal fluid if the temperature control is inactive and the >Probe< [67] has reached room temperature.

Remove the >Probe< [67] from the thermal fluid. The minimum bending radius of the cooling coil is 100 mm and **must never** be smaller.

Model F (with flexible >Probe< [67]):

Never use a bending radius of less than 40 mm when bending the flexible >Probe< [67].

8.4 Draining the cooling water

INFORMATION

This section must be observed when using water-cooled temperature control units.

8.4.1 Draining process

CAUTION

Pressurized cooling water connections

RISK OF INJURY

- Wear your personnel protective equipment (e.g. safety goggles).
- Carefully open the cooling water connection. Open slowly (1-2 signal edges) and drain the cooling water slowly.

NOTE

Building's isolating valves are not closed

DAMAGE BY FLOODING OF ROOMS

- Close the building-side isolating valves of the cooling water supply and return line.

PROCEDURE

- Proceed as described to drain the cooling water circuit.
 - From page 40, section »Draining the cooling circuit«.
 - From page 40, section »Dismantling the cooling water supply«.

8.5 Packing

Always use the original packaging! → Page 22, section »Unpacking«.

8.6 Shipping

NOTE

Temperature control unit transported in a horizontal position

DAMAGE TO THE COMPRESSOR

- Only transport the temperature control unit in an upright position.


NOTE

Temperature control unit transported incorrectly

PROPERTY DAMAGE

- Do not transport by truck on the castors or feet.
- Comply all requirements in this section to avoid damage to the temperature control unit.

Pallet with squared timber for free-standing units

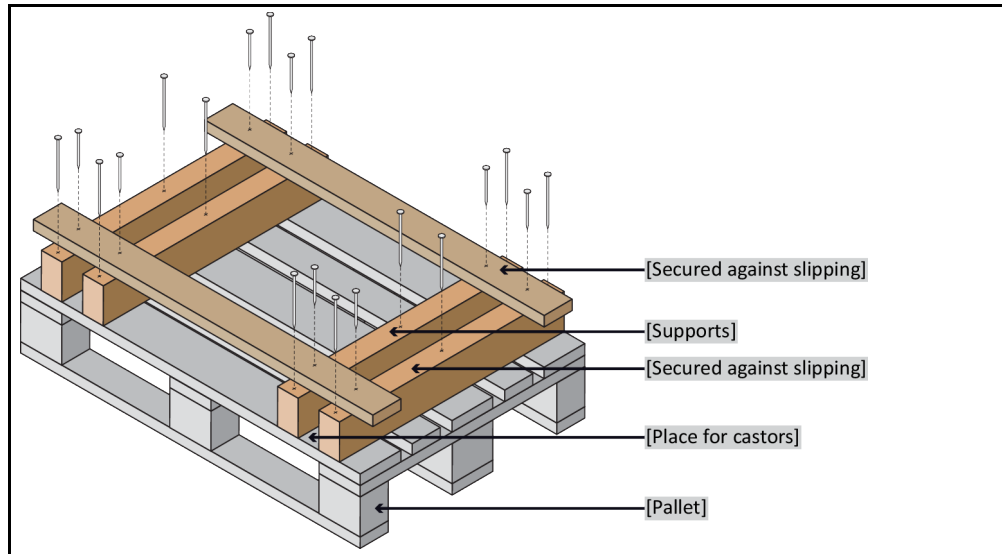

Transport using the lugs, if fitted, on the top of the temperature control unit. Do not transport the temperature control unit alone and without aids.

- Always use the original packaging for transportation.
- Indicate the upright transport position with arrows on the packaging.
- Always transport the temperature control unit upright on a pallet!
- Protect attachments from damage during transportation!
- During transport, place the temperature control unit on squared timber to protect the casters/feet.
- Secure with tensioning belts/lashing straps that are suitable for the weight.
- Additionally secure (depending on model) with plastic film, cardboard and straps.

8.7 Disposal

The operating company must observe the national and local regulations for the proper disposal.

CAUTION

**Uncontrolled or incorrect opening of the coolant circuit
RISK OF INJURY AND ENVIRONMENTAL DAMAGE**

- Work on the coolant circuit and disposal of the refrigerant must be carried out by approved refrigeration/air-conditioning system contractors.

NOTE

**Improper disposal
ENVIRONMENTAL DAMAGE**

- Spilled/leaked thermal fluid must be discarded immediately and correctly. Observe the proper disposal of thermal fluid and aids. → Page 15 the section »**Proper disposal of resources and consumables**«.
- To avoid environmental damage, have “disused” temperature control units disposed of exclusively by approved waste management companies (e.g. refrigeration and air conditioning companies).

Huber temperature control units and Huber accessories are made of high quality, recyclable materials. For example: Stainless steel 1.4301 / 1.4401 (V2A), copper, nickel, FKM, Perbunan, NBR, ceramic, carbon, Al-Oxid, red brass, brass, nickel-plated brass and silver solder. Proper recycling of the temperature control unit and accessories can actively help reduce CO₂ emissions in the production of these materials. Follow the laws and regulations of your jurisdiction when disposing material.

8.8 Contact data

INFORMATION

Contact your supplier or local specialist retailer **prior** to returning the temperature control unit. The contact data can be found on our homepage www.huber-online.com under the heading „Contact“. Please keep the serial number of the temperature control unit ready. The serial number can be found on the nameplate of the temperature control unit.

8.8.1 Telephone number: Customer Support

If your country is not mentioned in the list below: The responsible service partner can be found on our homepage www.huber-online.com under the heading „Contact“.

- Huber Deutschland: +49 781 9603 244
- Huber China: +86 (20) 89001381
- Huber India: +91 80 2364 7966
- Huber Ireland: +44 1773 82 3369
- Huber Italia: +39 0331 181493
- Huber Swiss: +41 (0) 41 854 10 10
- Huber UK: +44 1773 82 3369
- Huber USA: +1 800 726 4877 | +1 919 674 4266

8.8.2 Telephone number: Sales

Telephone: +49-781-9603-123

8.8.3 Email address: Customer Support

Email: support@huber-online.com

8.9 Clearance certificate

This certificate must be enclosed with the temperature control unit. → Page 41, section »**Decontamination/repairs**«.

9 Annex

Inspired by **temperature** designed for you

Peter Huber Kältemaschinenbau SE
Werner-von-Siemens-Str. 1
77656 Offenburg / Germany

Telefon +49 (0)781 9603-0
Telefax +49 (0)781 57211

info@huber-online.com
www.huber-online.com

Technischer Service: +49 (0)781 9603-244

-125 °C ... +425 °C

huber